

ROLLER SHADES
C95 SQUARE CASSETTE

Installation Manual v1.0









ROLLER SHADES C95 SQUARE CASSETTE

Hazardous Product Warning (Manual/Chain Driven Shades)



WARNING/MISE EN GARDE


Young children can STRANGLE in cord and bead chain loops. They can also wrap cords around their necks and STRANGLE. Always keep cords and bead chains out of children's reach.

Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

Attach tension device to wall or to floor. This can prevent children from pulling cords and bead chains around their necks. Fasteners provided with the tension device may not be suitable for all mounting surfaces. Use appropriate anchors for the mounting surface conditions.

For more safety information: 1-866-662-0666

C95 Square Cassette

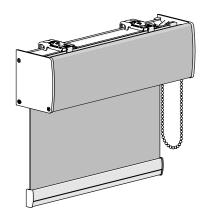

Parts Included:









Installation Screws

 
Ceiling Mount Brackets (For Inside Mt)

Wall Mt Brackets (For Outside Mt)

Tools Needed:







Pencil

Level


Cordless Drill



ROLLER SHADES C95 SQUARE CASSETTE


Measure Spacing:

Measure correct spacing of the brackets as shown below, maximum distance between them cannot exceed 47-1/4".

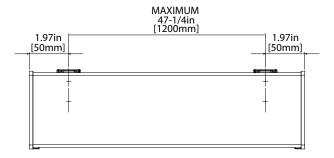


Bracket Installation:

Install the brackets as shown below:

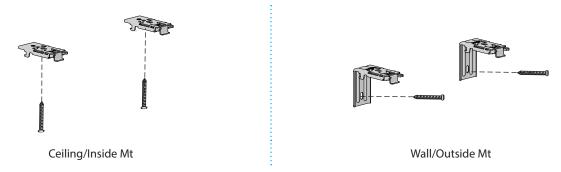

Cassette Installation:

Attach C95 cassette assembly as shown below:

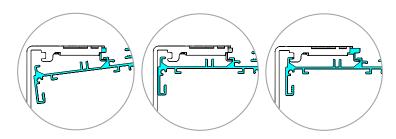

Tension Device Installation:

Tension device is pre-assembled onto chain during fabrication/production and must be installed for the shade to function properly.

