


Installation Manual v2.1







Assembly Parts (Standard Headrail):

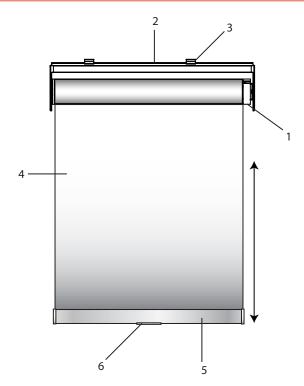

- 1. Controller
- 2. Headrail
- 3. Mounting Bracket
- 4. Fabric
- 5. Bottom Bar
- 6. Bottom Bar Handle

 
Parts Included:







Ceiling Mount Brackets

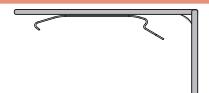


Wall Mount Brackets (optional)

 Tools Needed:





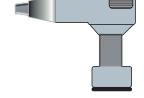

Pencil

Level

Cordless Drill



 
Bracket Installation:

 
INSIDE MOUNT:

For inside ceiling mount, use the provided inside mount brackets.

Using a pencil, mark the positioning of the bracket at least 2" from each end.

Use the hole in the middle of the bracket to secure it using the provided screws (#2 Robertson).

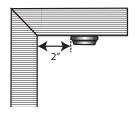


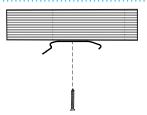


OUTSIDE MOUNT:

Outside mount brackets are designed to be secured to the wall. Wall mount brackets are optional and must be specified at the time of purchase. Use a level to ensure the brackets are level with each other. Installing brackets otherwise will cause the fabric to veer and subsequentely get damaged.

 Using a pencil, mark the positioning of the bracket at least 2" from each end.

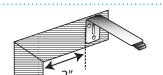

 
Use the hole in the middle of the bracket to secure it using the provided screws (#2 Robertson).

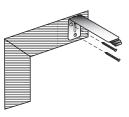


Headrail Installation:


Hook the front of the headrail to the front of the bracket as shown in Grab the back side of the headrail and press upwards until you hear a the image below.

  
click. Tuck the headrail slightly to ensure its fully locked in.

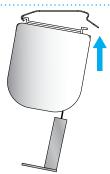

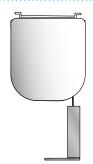

Headrail Removal:

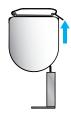 

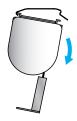 


Cordless Roller Shade System Installation Manual v1.0



Shade Operation:

Using the handle attached to the bottom rail, move the bottom rail up or down to desired position.

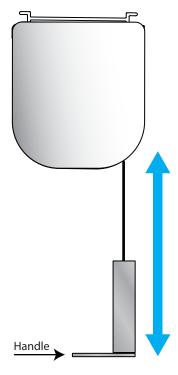

Troubleshooting:		
PROBLEM	CAUSE	SOLUTION
1. Shade does not reach its bottom limit	Too much tension on the spring	 Raise the shade all the way up Remove the shade from the brackets Remove the cover on the right (controller side) Turn the adjustment screw clockwise to reduce tension. Please make adjustment in 1/4 turns Install shade Lower shade to its desired lower limit. Note that reducing too much tension on the spring can lower the upper limit of the shade as well. If needed, repeat the above process
2. Shade does not rise to its upper limit	Limiter tension is too low	 Raise the shade all the way up Remove the shade from the brackets Remove the cover on the left (limiter side) Turn the adjustment screw counterclockwise. Please make adjustment in 1/4 turns Install shade Lower the shade all the way to its lower limit Raise the shade all the way up to desired limit. If needed, repeat the above process